

JET MASTER[®]

PHOTO WRAP

Search *JetMaster Systems* on YouTube to watch the video

Print - Wrap - Display


Assembly Instructions



Step 1: Remove part of the release liner and fold it back.



Step 2: Align your print with the interior perforated line around the edge of the frame.

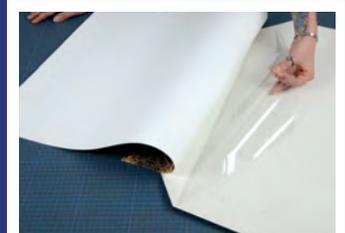

Step 3: Carefully fold back your print and remove the rest of the release liner.



Step 4: Place your print over the exposed adhesive and apply pressure using your hand or a roller to secure it in place.



Step 5: Pre fold all the creased lines on the back of the frame, ensure the face of your print is on a clean work surface.



Step 6: Use scissors to cut straight across each of the corner sections to remove the excess media.



Step 7: Fold up one edge of the frame and release the preformed tabs.



Step 8: Fold the edge around until it forms a square.



Step 9: Keeping the edge square apply firm pressure to secure the tabs to the back of the frame.



Step 10: Repeat this process for each edge tucking in the media at each corner.




Step 11: Gently support each corner to keep it square and apply the corner sticker to keep it in place.



Step 12; Wall Hanging Frames: Fold the edges of the backing tray up.



Step 13; Wall Hanging Frames: Place the backing tray into the back of the frame and press firmly in the centre to secure it to the exposed adhesive.

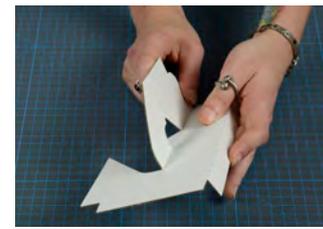

Step 12; Desktop Frames: Fold the edges of the backing tray down and release the desk stand.



Step 13; Desktop Frames: Place the backing tray into the back of the frame, taking care to make sure the desk stand is free.

Display System - Worldwide Patents Pending
All brands and images are used for illustration purposes only and remain the property of the original owner.

www.innovaart.com

+44 (0) 1992 571775 | info@innovaart.com | +1 856-456-3200